


## LIFTING

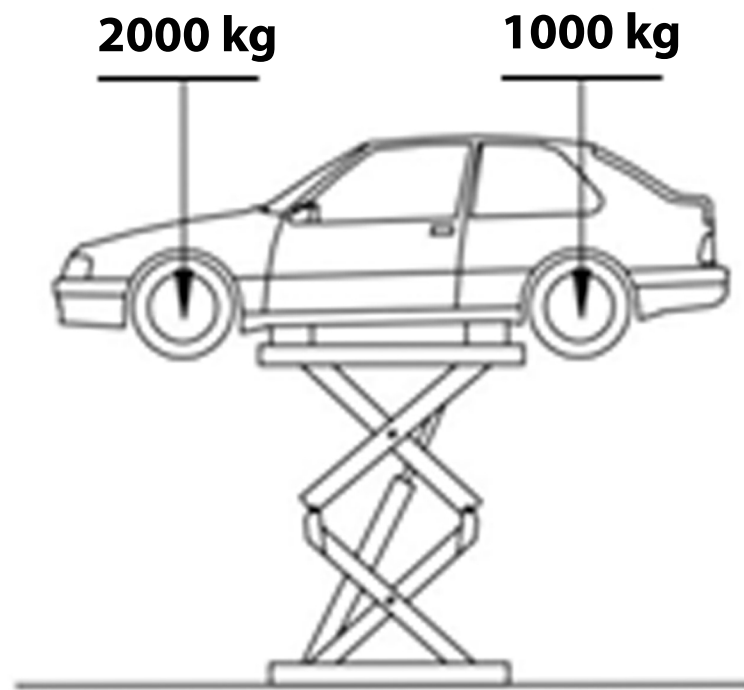

1. Before driving onto the lift, ensure that the lifting platforms are in the lower position.
2. Before driving the vehicle onto the lift, position the ramps so that the ramp rollers touch the floor. Otherwise, the supports and ramps may get damaged.
3. Drive the vehicle to the center of the drive-on platforms in both length and width so that its center of gravity is as close to the lift as possible.
4. Prevent the vehicle from moving. Engage the handbrake and put the vehicle in gear.
5. After positioning the vehicle, when you press the lift button (upper button), the lift will rise until you release the button or it reaches the maximum lifting height.
6. When the vehicle begins to rise slightly, stop the lift and ensure that the vehicle's lifting is safe.
7. Use only the lifting points recommended by the vehicle manufacturer and use lifting pads found under the hall. If necessary, you can use extension ramps to assist in supporting the vehicle by raising them before starting the lift. If the wheelbase is too short, leave the extension ramps in the lower position.
8. Inspect the working area. There should be no unauthorized persons or objects in the area.
9. Lift the car to the desired height and disconnect the lift's power during the work.

## LOWERING

1. Ensure that there is nothing underneath before lowering. The area should be clean and free from tools, parts, debris, etc.
2. Power on the lift.  
**NOTE!** Vehicles should not be lowered to the lowest position without tires. Otherwise, the lift cannot lift the load on its own. The vehicle may be damaged.
3. When you press the lower button (lower button), the lift descends to the desired height. If you do not release the button, a limit switch will automatically stop the descent at the set height.
4. The lift should be lowered completely to the lower position; a limit switch stops the descent about 20 cm above the ground.
5. The final twenty centimeters are lowered by simultaneously pressing the green button and lowering.
6. When the lift is in the fully lowered position, remove the rubber blocks, lower the ramps, and drive the vehicle off the lift.